


Update datalogger firmware

The firmware in the datalogger uses a Firmware Updater program that runs under Windows. You only need to download and install that once.

The Firmware Updater accepts update files that are uploaded from the Oregon RFID web site.

<http://www.oregonrfid.com/software/>

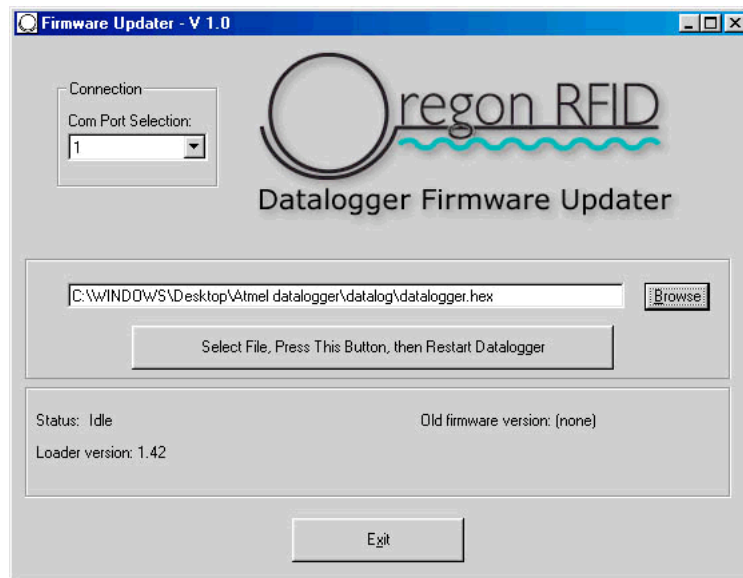

- Download the latest update (.upd) file
- Connect the RFID reader to the PC or laptop serial port
- Start the Firmware Updater program
- Browse to find the update (.upd) file
- Start the Updater by pressing the button in the center
- Turn on the reader (if it's on already, turn it off, then on)
- The LEDs will flash in a repeating cycle
- Wait until the updater to complete

If the procedure gets interrupted, it can be repeated as often as necessary.